


T-7716W / T-7717

7" Wet Angle Sander

7" Angle Sander

Taylor
Pneumatic Tool Company

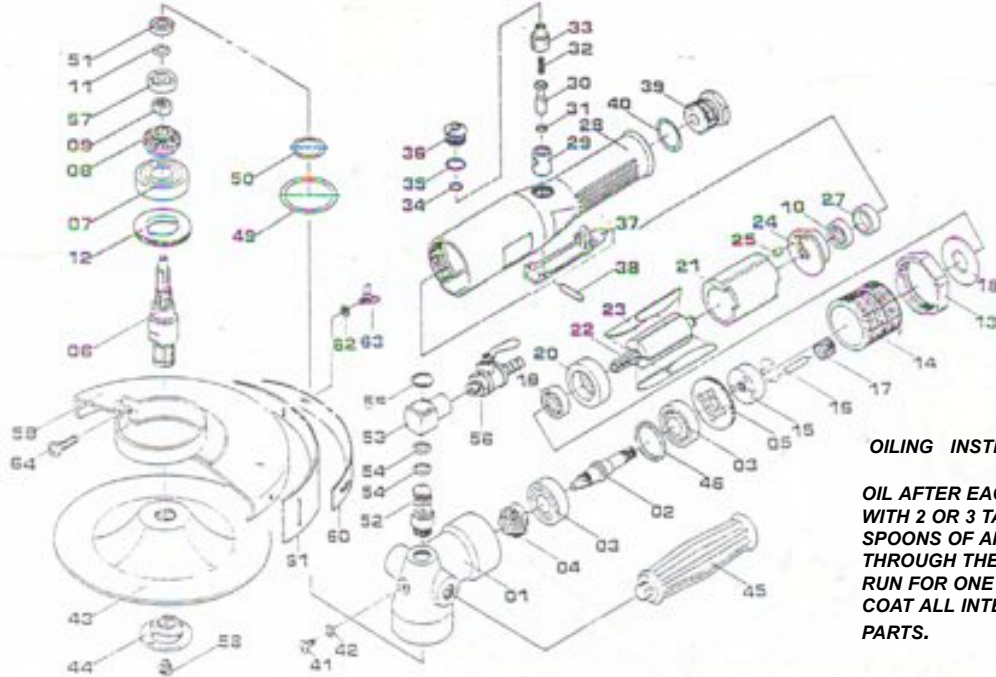

OILING INSTRUCTIONS:

**OIL AFTER EACH USE
WITH 2 OR 3 TABLE-
SPOONS OF AIRTOOL OIL
THROUGH THE AIR INLET.
RUN FOR ONE SECOND TO
COAT ALL INTERNAL
PARTS.**

USE 90 PSI MAXIMUM

Ref.#	Part #	Description	Qty.
1	7716W01	Angle housing	1
2	7716W02	Spindle	1
3	7716W03	Bearing	2
4	7716W04	Pinion gear	1
5	7716W05	Bearing plate	1
6	7716W06	Arbor	1
7	7716W07	Bearing	1
8	7716W08	Bevel gear	1
9	7716W09	Nut	1
10	7716W10	Bearing	1
11	7716W11	Wave washer	1
12	7716W12	Bearing cap	1
13	7716W13	Nut	1
14	7716W14	Internal gear	1
15	7716W15	Idler gear body	1
16	7716W16	idler pin	3
17	7716W17	Idler gear	3
18	7716W18	Washer	1
19	7716W19	Bearing	1
20	7716W20	Front end plate	1
21	7716W21	Cylinder	1
22	7716W22	Rotor	1
23	7716W23	Rotor blades (set of 4)	1 set
24	7716W24	Rear end plate	1
25	7716W25	Pin	1
27	7716W27	bearing cap	1
28	7716W28	Motor housing	1
29	7716W29	Bushing	1
30	7716W30	Valve stem	1
31	7716W31	"O" ring	1
32	7716W32	Valve stem	1

Ref.#	Part #	Description	Qty.
33	7716W33	Regulator	1
34	7716W34	"O" ring	1
35	7716W35	"O" ring	1
36	7716W36	Valve screw	1
37	7716W37	Throttle lever assembly	1
38	7716W38	Spring Pin	1
39	7716W39	Inlet bushing	1
40	7716W40	"O" ring	1
41	7716W41	Plug	1
42	7716W42	"O" ring	1
43	7716W43	Pad	1
44	7716W44	Pad nut	1
45	7716W45	Handle	1
46	7716W46	Spacer collar	1
47	7716W47	Wrench (not shown)	1
48	7716W48	Spanner wrench (not shown)	1
49	7716W49	"O" ring	1
50	7716W50	"O" ring	1
51	7716W51	Oil seal	1
52	7716W52	Inlet deflector bolt	1
53	7716W53	Inlet deflector	1
54	7716W54	"O" ring	2
55	7716W55	Retaining ring	1
56	7716W56	Water valve	1
57	7716W57	Bearing	1
58	7716W58	Nozzle	1
59	7716W59	Guard	1
60	7716W60	Guard band	3
61	7716W61	Rubber guard	3
62	7716W62	Button head screw	1

505 N. Railroad Ave.
P.O. Box 1117
Boynton Beach, Florida 33435

SEE OUR CATALOG
at
www.taylorpneumatic.com

PH. 561-732-1111
FAX 561-731-4412
Toll Free 800-805-8665

03/09 TPTCDPT
all rights reserved
COPYRIGHT 2009