


T-7891N

3/16" Heavy Duty Riveter

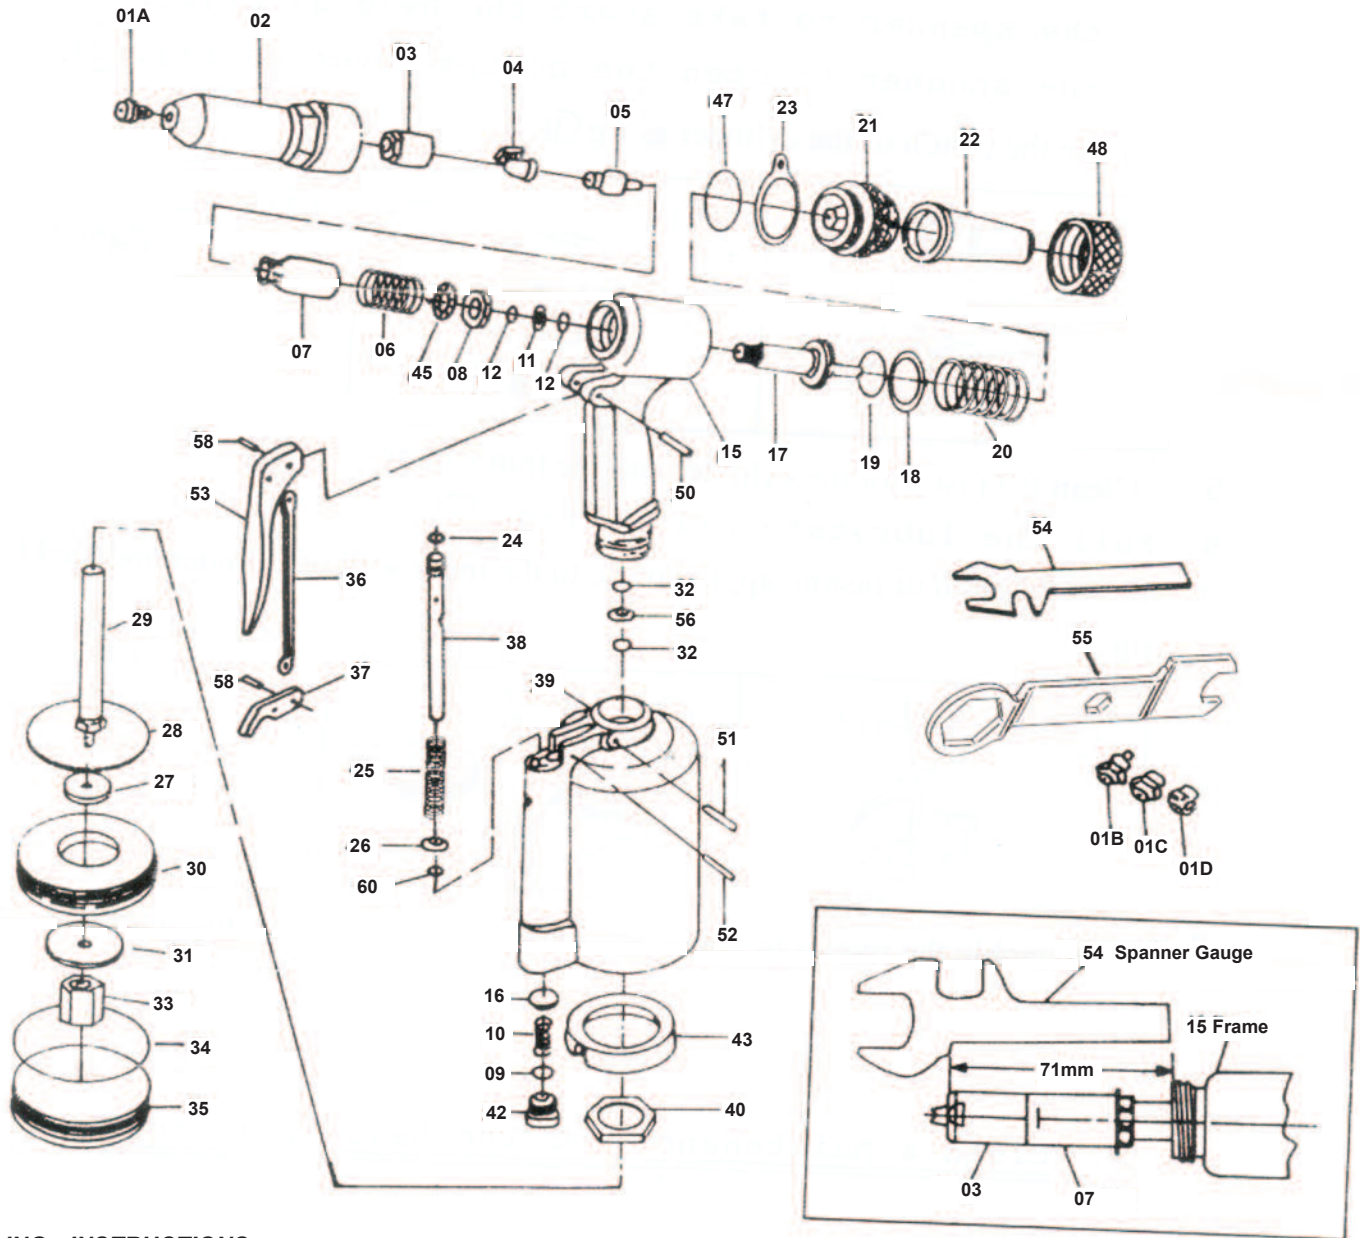

OILING INSTRUCTIONS:

OIL AFTER EACH USE WITH 1 TABLESPOON OF AIRTOOL OIL THROUGH THE AIR INLET. PULL THE TRIGGER ONCE OR TWICE TO COAT INTERNAL PARTS.

FOLLOW INSTRUCTIONS ON BACK OF THIS SHEET TO MAINTAIN FLUID LEVEL IN HYDRAULIC PORTION OF TOOL.

505 N. Railroad Ave.
 P.O. Box 1117
 Boynton Beach, Florida 33435

SEE OUR CATALOG
 at
www.taylorpneumatic.com

PH. 561-732-1111
 FAX 561-731-4412
 Toll Free 800-805-8665

12/06 TPTCDPT
 all rights reserved
 COPYRIGHT 2006