T-7893N

1/4” MonoBolt Riveter

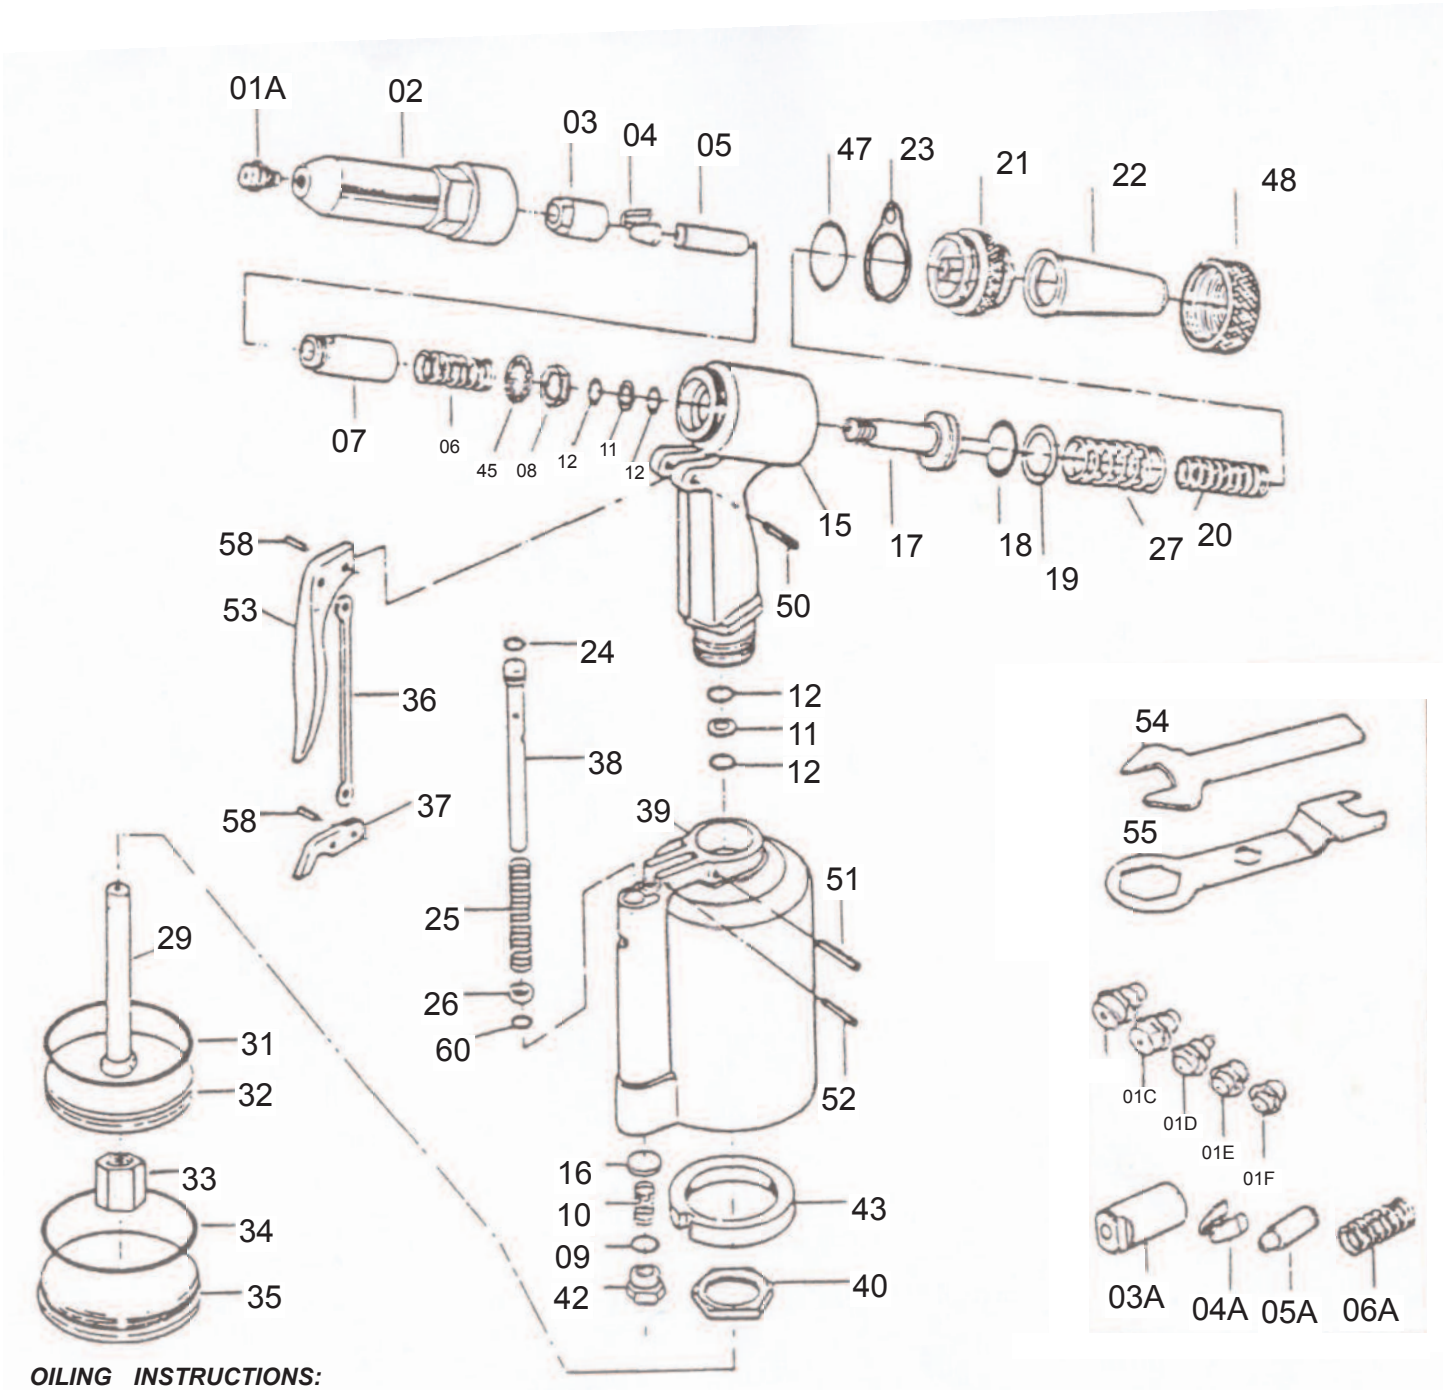

OILING INSTRUCTIONS:

OIL AFTER EACH USE WITH 1 TABLESPOON OF AIRTOOL OIL THROUGH THE AIR INLET. PULL THE TRIGGER ONCE OR TWICE TO COAT INTERNAL PARTS.

FOLLOW INSTRUCTIONS ON BACK OF THIS SHEET TO MAINTAIN FLUID LEVEL IN HYDRAULIC PORTION OF TOOL.

505 N. Railroad Ave.
P.O. Box 1117
Boynton Beach, Florida 33435

SEE OUR CATALOG
at
www.taylorpneumatic.com

PH. 561-732-1111
FAX 561-731-4412
Toll Free 800-805-8665

12/06 TPTCDPT
all rights reserved
COPYRIGHT 2006